

(B134) (Blue)

C

55	54	53	52	51	50	49	118	117
62	61	60	59	58	57	56	120	119
67	66	65	64			63	122	121
72	71	70	69			68	124	123

(B135) (Gray)

B

31	30	29	28	27	26	25	110	109
38	37	36	35	34	33	32	112	111
43	42	41	40			39	114	113
48	47	46	45			44	116	115

(B136) (Black)

A

7	6	5	4	3	2	1	102	101
14	13	12	11	10	9	8	104	103
19	18	17	16			15	106	105
24	23	22	21			20	108	107

1	Ignition #1
2	Idle Speed Control Valve 4
3	Idle Speed Control Valve 2
4	Fan Relay Main
5	Muffler control
6	Solenoid Box - Intake Valve Solenoid
7	Solenoid Box - Exhaust Valve Solenoid (Positive px)
8	Ignition #2
9	Idle Speed Control Valve 3
10	Idle Speed Control Valve 1
11	Fan Relay Sub
12	
13	Exhaust Valve Duty Solenoid
14	Solenoid Box - Exhaust Valve Solenoid (Negative px)
15	Ignition #3
16	Air Con Relay
17	
18	Alternator Control
19	Wastegate Solenoid - Primary Turbo
20	Ignition #4
21	
22	CEL - Check Engine Light
23	Test Mode Connector
24	Solenoid Box - Pressure Source Exchange Solenoid
25	Purge Control Solenoid
26	
27	Fuel Pump Control
28	Ground (MT)
29	To AT Control Circuit - Torque Down 1
30	Starter Switch
31	Power Steering Oil Pressure switch
32	RRV Solenoid (With VDC)
33	To AT Control Circuit - Torque Down Inhibition
34	RPM / Engine Revs
35	Read Memory Connector
36	To AT Control Circuit - Torque Down 2
37	Air Con Switch
38	Blower Fan Switch
39	VDC - EAC
40	Test Mode Connector / Check Connector / "Static Test Mode Connectot"
41	Small light switch
42	VDC - AEB
43	Rear Defogger Switch
44	VDC - EAS
45	Neutral Switch (MT) To Inhibitor Switch (AT)
46	VDC - AEC
47	Ground (Without VDC) - VDC - AET
48	Vehicle Speed Sensor (MT) To AT Control Module (AT)
49	Absolute Pressure Sensor
50	Crank Angle Sensor
51	Cam Angle Sensor
52	
53	
54	Air Con - Intake Air Volume
55	Mass Air Flow Sensor
56	
57	
58	
59	Check Connector & Select Monitor Connector
60	Sensor Power source
61	
62	Differential Pressure Sensor
63	Ground - Input - Crank/Cam Sensors
64	To AT Control Circuit
65	Oxygen Sensor
66	Throttle Position Sensor
67	
68	Shields - MAF, Crank, Cam, Oxygen Sensors
69	Knock Sensor Shield
70	Water temp sensor & Thermometer
71	
72	Knock Sensor

49	Absolute Pressure Sensor
54	Air Con - Intake Air Volume
16	Air Con Relay
37	Air Con Switch
18	Alternator Control
38	Blower Fan Switch
51	Cam Angle Sensor
22	CEL - Check Engine Light
59	Check Connector & Select Monitor Connector
50	Crank Angle Sensor
62	Differential Pressure Sensor
117	ECU Power Source
13	Exhaust Valve Duty Solenoid
4	Fan Relay Main
11	Fan Relay Sub
27	Fuel Pump Control
119	Ground
120	Ground
122	Ground - Input - Absolute px, Diff px, TPS Sensors
63	Ground - Input - Crank/Cam Sensors
124	Ground - Input - Mass Air Flow Sensor
102	Ground - Output - "Power Line"
104	Ground - Output - Ignition
101	Ground - Output - Injectors
28	Ground (MT)
47	Ground (Without VDC) - VDC - AET
10	Idle Speed Control Valve 1
3	Idle Speed Control Valve 2
9	Idle Speed Control Valve 3
2	Idle Speed Control Valve 4
1	Ignition #1
8	Ignition #2
15	Ignition #3
20	Ignition #4
121	Ignition Switch / Fuel Pump Relay?
108	Injector #1
107	Injector #2
105	Injector #3
103	Injector #4
118	Injector Power source?
72	Knock Sensor
69	Knock Sensor Shield
55	Mass Air Flow Sensor
5	Muffler control
45	Neutral Switch (MT) To Inhibitor Switch (AT)
65	Oxygen Sensor
31	Power Steering Oil Pressure switch
25	Purge Control Solenoid
35	Read Memory Connector
43	Rear Defogger Switch
34	RPM / Engine Revs
32	RRV Solenoid (With VDC)
60	Sensor Power source
68	Shields - MAF, Crank, Cam, Oxygen Sensors
41	Small light switch
14	Solenoid Box - Exhaust Valve Solenoid (Negative px)
7	Solenoid Box - Exhaust Valve Solenoid (Positive px)
6	Solenoid Box - Intake Valve Solenoid
24	Solenoid Box - Pressure Source Exchange Solenoid
110	Solenoid Box - Relief Valve 1 Solenoid
109	Solenoid Box - Relief Valve 2 Solenoid
30	Starter Switch
23	Test Mode Connector
40	Test Mode Connector / Check Connector / "Static Test Mode Connectot"
66	Throttle Position Sensor
64	To AT Control Circuit
29	To AT Control Circuit - Torque Down 1
36	To AT Control Circuit - Torque Down 2
33	To AT Control Circuit - Torque Down Inhibition
112	To Ignition Relay - ???
123	To Ignition Relay - ???
42	VDC - AEB

101	Ground - Output - Injectors
102	Ground - Output - "Power Line"
103	Injector #4
104	Ground - Output - Ignition
105	Injector #3
106	
107	Injector #2
108	Injector #1
109	Solenoid Box - Relief Valve 2 Solenoid
110	Solenoid Box - Relief Valve 1 Solenoid
111	
112	To Ignition Relay - ???
113	
114	
115	
116	
117	ECU Power Source
118	Injector Power source?
119	Ground
120	Ground
121	Ignition Switch / Fuel Pump Relay?
122	Ground - Input - Absolute px, Diff px, TPS Sensors
123	To Ignition Relay - ???
124	Ground - Input - Mass Air Flow Sensor

46	VDC - AEC
39	VDC - EAC
44	VDC - EAS
48	Vehicle Speed Sensor (MT) To AT Control Module (AT)
19	Wastegate Solenoid - Primary Turbo
70	Water temp sensor & Thermometer
12	
17	
21	
26	
52	
53	
56	
57	
58	
61	
67	
71	
106	
111	
113	
114	
115	
116	

px = Pressure